



INSTRUCTIONS FOR THE INSTALLATION

User's instructions

Igniting the burners

In these models the knob controls both ignition and device. Proceed as follows to ignite the burners:

- 1) Turn the chosen knob.
- 2) Keep the knob strongly pressed in for 3/4 seconds to allow the spark to light the gas that exits from the flametamer and to permit the burner to heat up.
- 3) Release the knob after about 3/4 seconds and allow the burner to reach the desired temperature.

name as desired, rotating the knob anti-clockwise. Repeat points 1 and 2 if does not remain on.

Using the burners

For greater efficiency and less gas consumption, use pans with the right diameters for the burners. Avoid pans extending out from underneath the pans (refer to the

Table of recommended	
Burner	Ø Pan diameter
Auxiliary	from dia. 8 to 10
Semi rapid	from dia. 14 to 16
Rapid	from dia. 20 to 22
Triple ring	Above dia. 22

Automatic safety valves

This safety device automatically closes the gas supply in case of flame failure, avoiding inconvenience caused by failure to comply with the

CLEANING AND MAINTENANCE

GENERAL

Cleaning and maintenance should be carried out with the appliance cold especially when cleaning the enamel. Avoid leaving alkaline or acid substances (lemon juice)