





SLIDE & PRICE CHANGE INSTRUCTIONS FOR THE STRAIGHT SIX

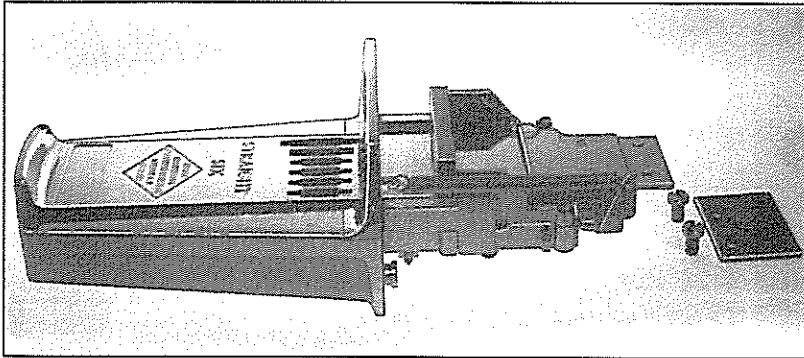


SLIDE CHANGE


- 1 Remove any actuating bracket attached to the end of the slide.

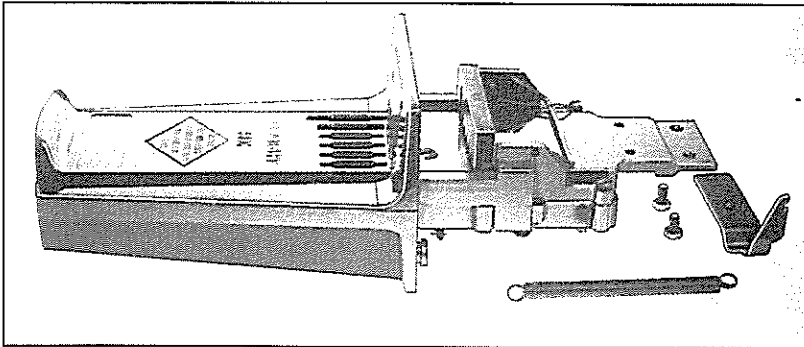

- 2 Remove slide back-stop and return spring.

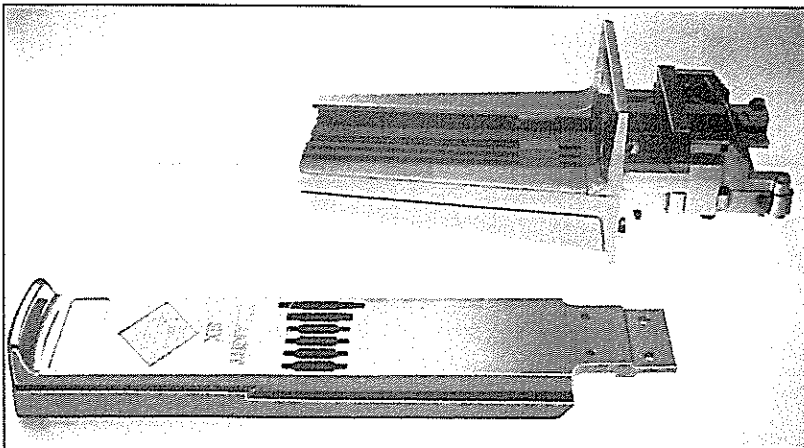


- 3 Pull out slide.

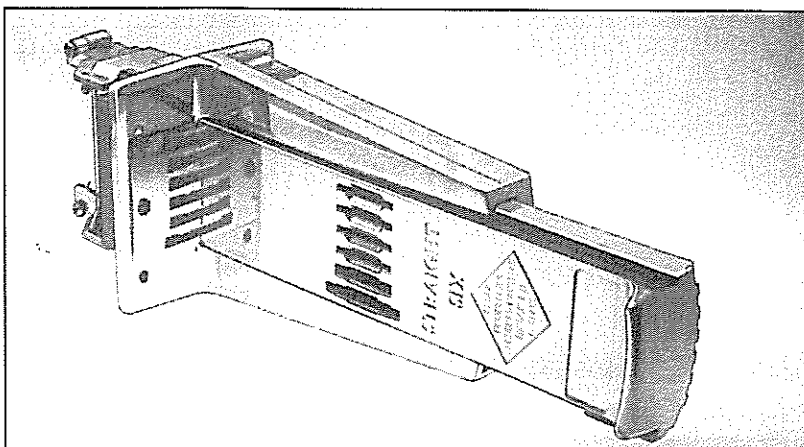


- 4 To enter new slide, turn mech onto its left-hand side and push slide in.
- 5 Replace slide stop and return spring. Remember to use LOCTITE on slide stop screws.

PRICE CHANGE


Carry out operations 1-3 of slide change then

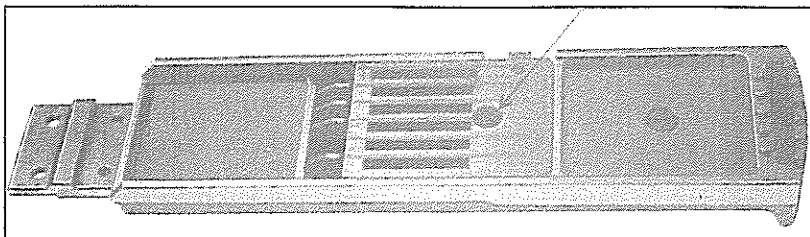


- 6 Undo stop plate screw.
Use a LARGE screwdriver.

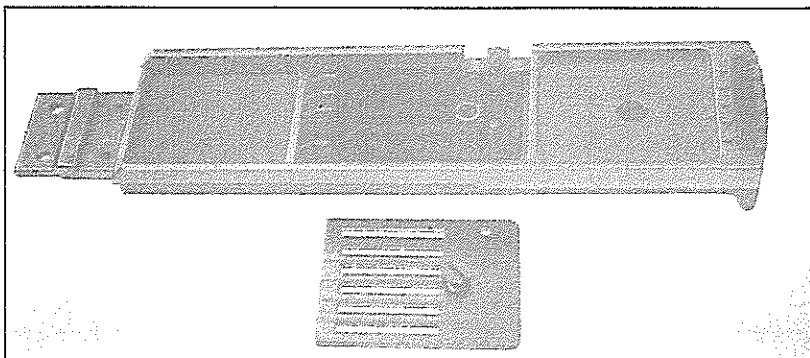


- 7 Take off stop plate.

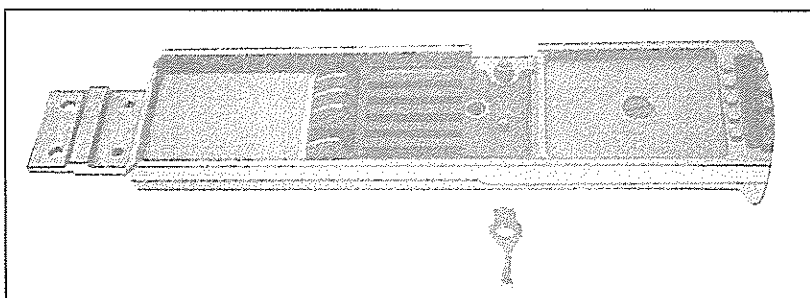

- 8 Remove ratchet pawl
and spring

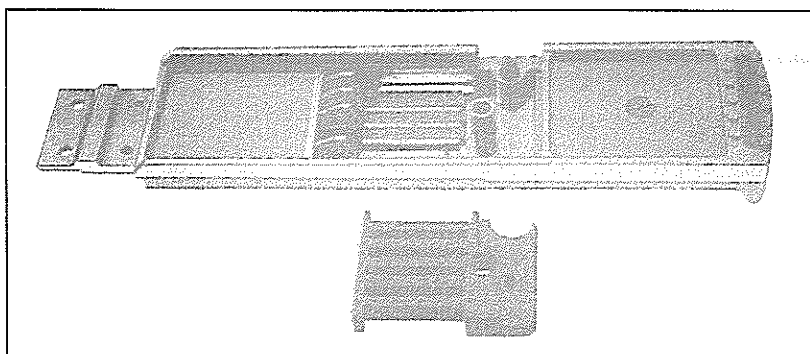

- 9 Remove nylon moulding.

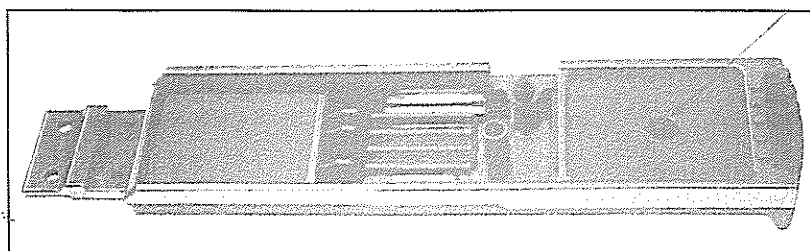


- 10 Re-arrange block out cams
to suit your new price, tak-
ing additional cams from
under cover plate.

11 Replace cover plate LOCTITE screw.


12 Replace moulding.

13 Replace ratchet spring and ratchet pawl.

NOTE: Ratchet pawl goes with swaged side up.

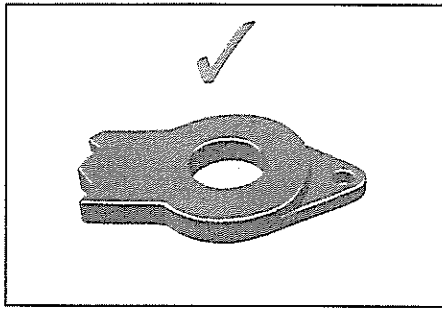

Swaged side

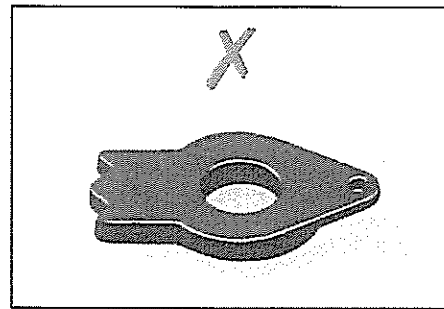


Plain side

take care not to strain ratchet spring.

14 Replace stop plate. LOCTITE SCREW.

15

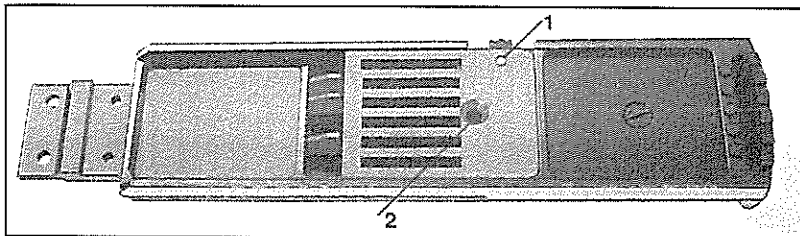

Make sure stop plate (1) locates the ratchet pivot, before replacing screw in countersunk hole (2).

16 MAKE CERTAIN LOCTITE is used to hold stop plate fixing screw vibration proof.

17 Follow 4 and 5 of slide change instructions on page 1.