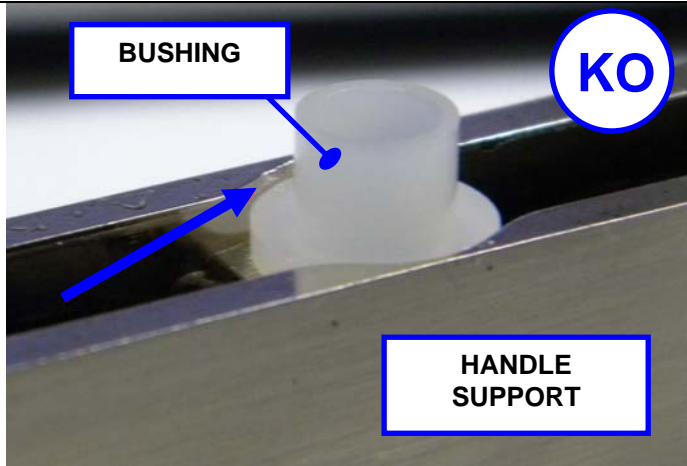
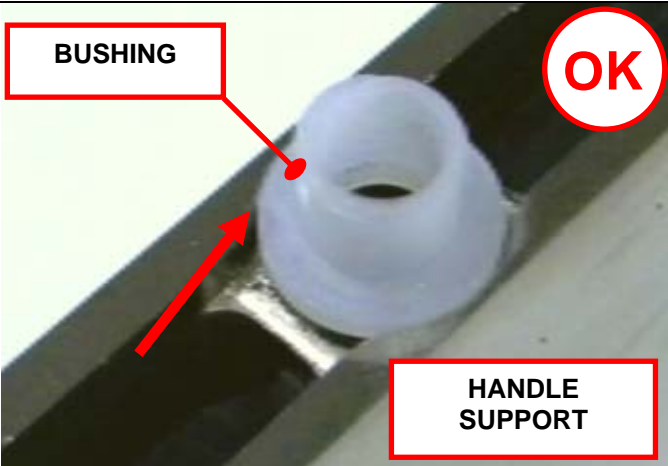


VERSION	00	11/2010	First version

Document n°	FRN-SB2010-09-washer for outer glass breaking- SC ovens					
Brandt	Smeg					
Models involved	SCP112N-8	SCT109N-8	SAP112-8	SC106-8	SC107SG-8	SCP113-8
	SCP109N-8	SCT109B-8	SA109-8	SC106SG-8	SC109-8	SCP113SG8
	SC106B-8	SC107N-8	SA112-8	SC106PZ-8	SC109SG-8	SCT105-8
	SC106N-8	SC109N-8	SAP109-8	SCT109-8	SA109M-8	SCT105SG8
	SC112N-8	SCP108RB8	SCP112-8	SCP112PZ8	SAP109M-8	SAP109-9
	SC112B-8	SCP108RN8	SCP109-8	SC112PZ-8	SCP12-8	
	SCP112B-8	SCP113N-8	SCP109SG8	SCT109SG8	SCP108R-8	
	SCP109B-8	SCT105N8	SC112-8	SCP112SG8	SCP108RS8	
Cause	<p>The wrong plastic bush position , which protects the glass (that is to say lower than the inner slot of the handle support) and the stretch occurring during the handle fixing, can affect the outer glass.</p> <p>See the following pictures.</p>					
Description of the modification	Put an additional washer p/n 764130572 into the two handle supports , under the bush protecting the glass . Follow the instructions hereafter.					
Date of introduction	01/10/2010					


For the appliances produced **before the 1st October 2010**, owing to a outer door glass breaking, carry out the following checks and apply the washer p/n **764130572**. (under the bush which protects the glass for each handle support , right and left)

WRONG CONFIGURATION	RIGHT CONFIGURATION
	
A. Glass protection bush applied into the handle support. Note that the bush base is lower than the edge of the handle support.	B. Glass protection bush applied into the handle support. Note that the bush base is aligned with the edge of the handle support.

Proceed as following:



1. Remove the handle and the two bushes from its place (fitted into the handle supports).

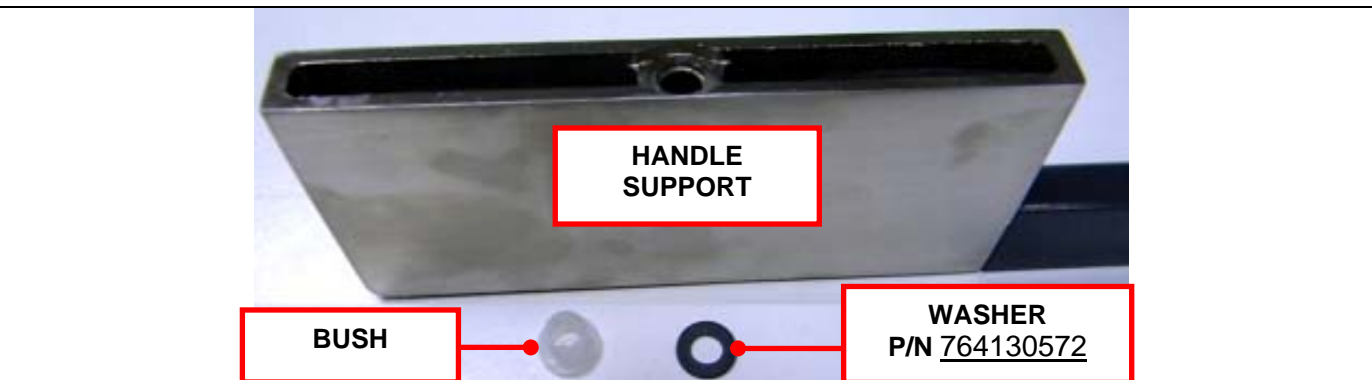


2. Add a washer p/n **764130572** between the handle support and the bush (for both supports) in order to align the bush base to the handle support edge.



3. Add the washer p/n. **764130572**



4. Position the bush on the washer

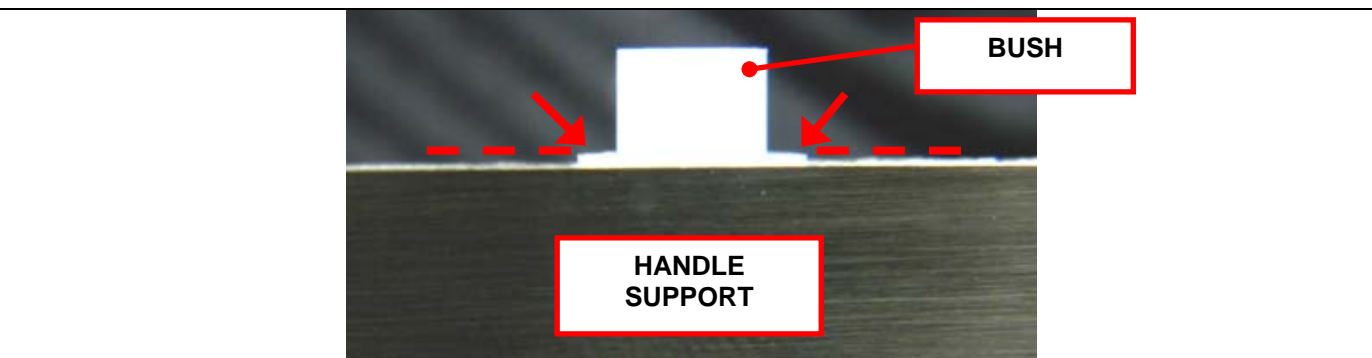

5. Side view of the bush fitted into the handle support.
When the handle support is fixed, lift the bush and the washer up in order to avoid mechanic shock on the door outer glass. Repeat the procedure for the opposite handle support.