















 

 




 




Full touch control instruction manual







Key operation:

									
Main on/off switch	Plus key	Minus key	Light	Timer	Info	Minus	Plus	Rapid heat-up	OK

1. Time of Day / Minute Minder / Cooking time / End of time setting :

- 1) Time of Day: press / to adjust the time before you switch the on/off key .
- 2) Minute Minder  : press / to set the cooking time, press  to start cooking. The Minute Minder count down starts to 0:00 (min:sec). The display shows the symbol  and the remaining time is displayed continuously.
- 3) Cooking time  : press / to set the cooking time 00:00 (hour: min), press  to start cooking.
- 4) End of cooking time  : after user sets the cooking time , press the key  to set the end of cooking time. The oven starts as soon as the start time reaches. For example: The time is 12:00 now, user sets the cooking time to 0:30(hour: min), then press  to set the end of time to 12:40. The oven starts to cook at 12:10, and the display shows the remaining time of cooking.

 
2. Function setting

- 1) Press the key  to switch on the oven. User can select the different cooking modes by pressing the key  .
- 2) Temperature can be set by the key / after the cooking mode is selected, Once the cooking mode and the temperature is fixed, press the key  to start cooking.


3. Rapid heat – up

When the setting temperature exceeds 100 degrees and the pre-heat function hasn't been finished, user can press the key  to start the rapid heat-up mode.

4. Configuration setting:

 
Press the “Info” key  for 5 seconds to set the mode. Then press the “Info” again to select Mode 1, Mode 2, Mode 3, Mode 4, Mode 5, Mode 6. Once selecting the mode, user can press \oplus/\ominus to select option 1, 2 or 3.

Mode	Description	Option 1	Option 2	Option 3
Mode 1	Time display	Display always	Display when oven is working	
Mode 2	“Beep” sound after the time count down	Short	Medium	Long
Mode 3	Duration of time setting	Short	Medium	Long
Mode 4	Cooling fan working time after oven finishes cooking	Short	Medium	Long
Mode 5	Display brightness	Dark	Medium	Bright
Mode 6	“Beep” sound when selecting the function mode	No	Yes	

After user finish the selection of “Info” mode, press the key  to confirm.

5. Cooking mode symbol:

The sequence of cooking modes displayed in the screen as below:

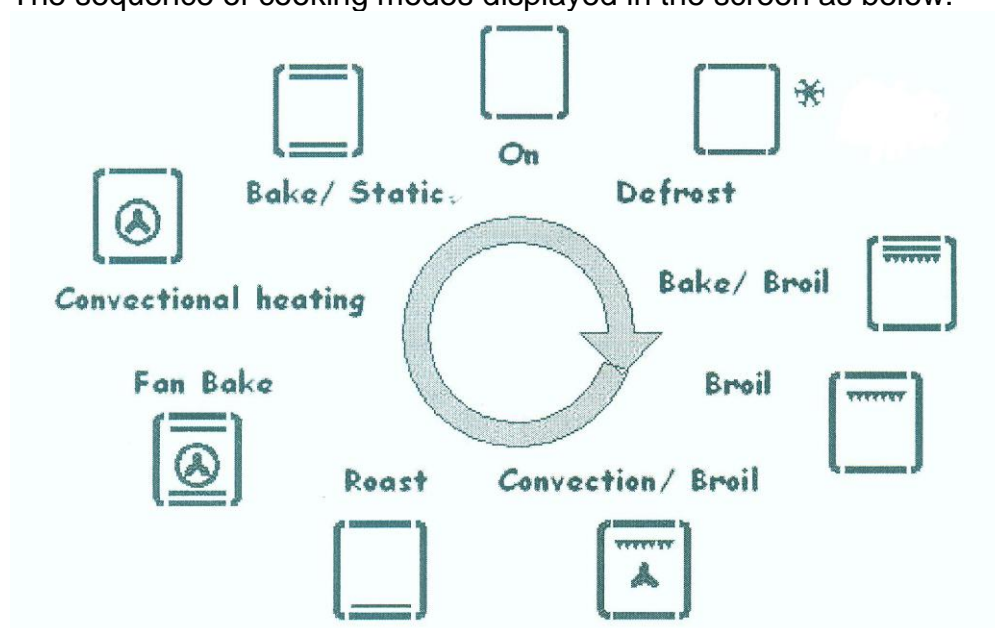

6. Child-safety lock: Press the  button for 5 sec after you switch off the oven.