

INSTALLATION INSTRUCTIONS

Unpacking your dryer


Dimensions

a=830 mm

b=600 mm

c=560 mm

Weight=30 kg

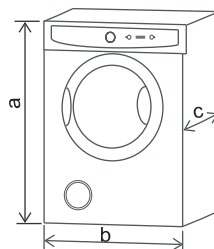

Remove the transport packaging (fig.1)

Remove the tape on the door (fig.2), the wall mounting kit and the inverted panel film attached to the inside of the drum (fig.3) before starting the dryer.

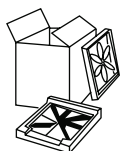


fig.1

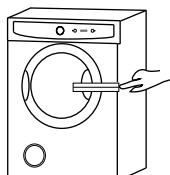


fig.2

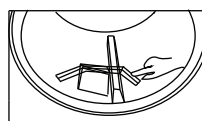


fig.3

Packing accessories

Check list of the accessories and materials provided with the machine:

Name	Quantity
User manual	1
Wall mounting kit	1
Inverted panel film	1
Flexible hose	1
Flexible hose clip	1
Hose connector	1
Stacking kit	1


To ensure the dryer operates normally, attention must be paid to the following:

1. The rear of the dryer must not have any restriction to the intake of fresh air.
2. Check the dryer for any damage. If any damage is found do not operate and contact your supplier or Authorised Service Centre.
3. The dryer must be kept away from flammable substances.
4. The surrounding environment must be dry and ventilated.
5. For best results, the ambient temperature should be between 10 °C and 35 °C.


INSTALLATION INSTRUCTIONS

Free standing

The dryer stands on the floor and can easily be moved into position. Ensure that it is placed on a level floor. Also ensure there is at least 50 mm air clearance between the back of the dryer and the wall to allow fresh air flow for efficient operation.

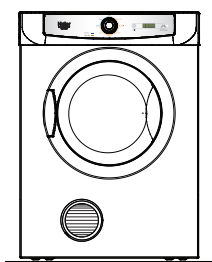

Attention:
Please don't put a heavy load on the dryer's top panel, such as a basket full of wet laundry.

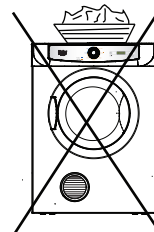

Inverted wall mounting

The dryer can be mounted on the wall in the inverted position only by following these instructions.

Invert the dryer so that the control panel is at the bottom (see figure 4) this allows easier access to the controls.


1. Determine the location of the dryer on the wall and mark the bracket position.

A minimum 50 mm is needed between the top of the dryer and the ceiling for ease of installation;

If mounting above a washing machine, allow sufficient room to open the lid of the washer.

Tools required


For plaster/ Wooden wall	Drill & 3mm Bit	1
	Philips head screwdriver	1
Wall mounting kit includes		
Description	Plastic spacers	2
	Wall hanging brackets	2
	Hanging hook	2
	Wood screws, 12gx50mm	4
	Screws for hanging hooks and plastic spacers.	6

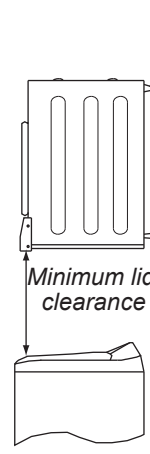

INSTALLATION INSTRUCTIONS


2. Fix the wall hanging brackets to the wall securely (eg. into the stud).

If the studs are too far apart, fit a timber slat to the studs then mount the brackets onto the slat. The distance between each is 553 mm as per diagram (Fig.1).

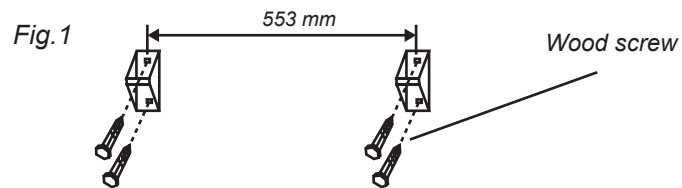


3. Install the hooks to the dryer, in the inverted position.

Remove the 2 screws and 2 plastic plugs as indicated in Fig.2.

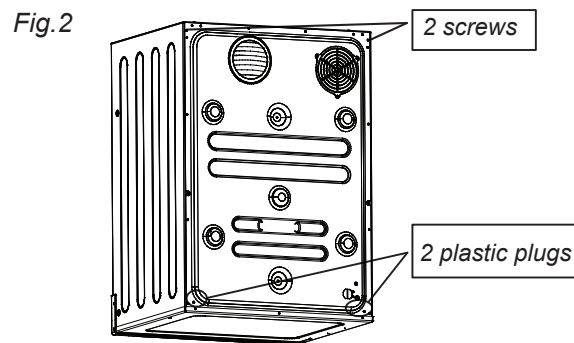

4. Align the hooks as shown in fig.3 and refit screws tightly. Install the spacers provided in Fig.3.

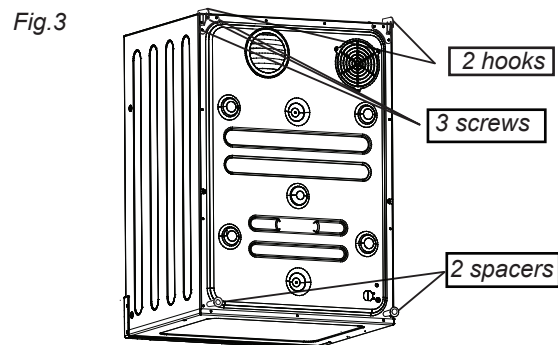

INSTALLATION INSTRUCTIONS

5. With assistance, mount dryer on wall brackets. See Fig.4.


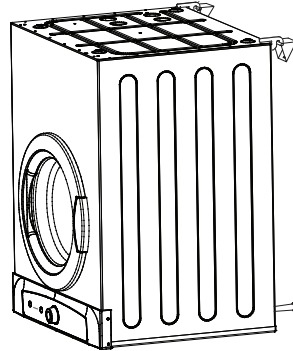


Fig.4

6. A second control panel with inverted symbols is supplied. Peel the release paper from the back of inverted film then place new control panel film on the surface so that the writing is the correct way around.

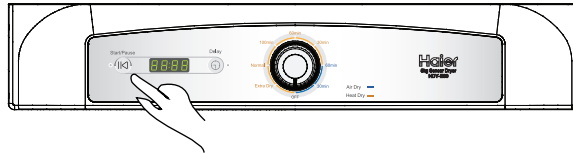

7. Press the Start/Pause button and hold it in the pressed position, and at the same time, turn the program dial knob from the OFF position to any other program, until the inversion is displayed.

Caution:

Plug must be accessible after installation.

Stacking installation

You can use a stacking kit (included as an accessory) if you want to mount your dryer on the top of a Haier front load washing machine, ensure the washer is the same width as the dryer.

1. Remove 4 screws among screws on the bottom panel (see fig.1), and install the stacking kit on the bottom panel (see fig.2).

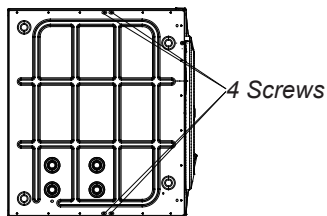


Fig.1

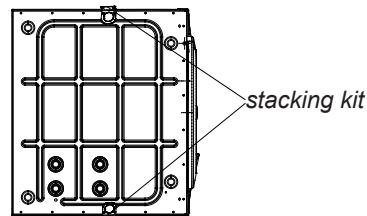


Fig.2

INSTALLATION INSTRUCTIONS

2. Install the dryer with stacking kit on the top of the front load washing machine (Fig.3). Drill two holes on both sides of washer with 2.9mm diameter drill. Detailed drill position as shown on the stacking kit. Make sure the included screws are used. Fix the stacking kit on the top cover of washing machine, as shown on Fig.4.

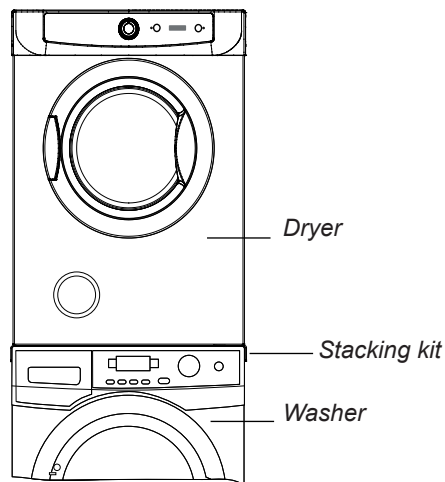


Fig.3

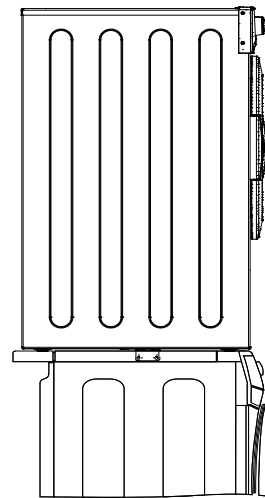



Fig.4

Change the venting mode

There are three venting options:

- **Front venting**

The exhaust grill has a range of positions, which allows you to select the optimum exhaust air angle. Simply hold the grill and rotate it until you reach the desired position.

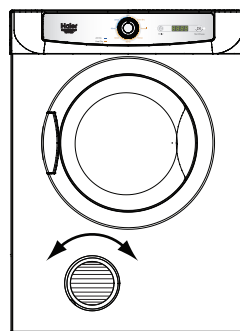

Note: If the dryer is mounted on the wall you must use the front venting option.