



Unsatisfactory washing result

<i>Problem</i>	<i>Possible Causes</i>	<i>What To Do</i>
<i>The dishes are not clean</i>	The dishes were not loaded correctly.	See notes in "Loading the Dishwasher Baskets".
	The program was not powerful enough.	Select a more intensive program. See "Wash Cycle Table".
	Not enough detergent was dispensed.	Use more detergent, or change your detergent.
	Items are blocking the path of spray arms.	Rearrange the items so that the spray arm can rotate freely.
	The filter assembly in the base of the dishwasher is not clean or is not correctly fitted. This may cause the spray arm jets to get blocked.	Clean and/or fit the filter assembly correctly. Clean the spray arm jets. See "Cleaning the Spray Arms".
<i>Cloudiness on glassware</i>	Combination of soft water and too much detergent.	Use less detergent if you have soft water and select a shortest cycle to wash the glassware and to get them clean.
<i>Black or gray marks on dishes</i>	Aluminum utensils have rubbed against dishes.	Use a mild abrasive cleaner to eliminate those marks.
<i>Detergent remains in the dispenser at the end of the wash cycle</i>	Dishes block detergent cups.	Reload the dishwasher such that the detergent dispenser is not prevented from opening during the wash cycle.

Unsatisfactory drying result

<i>The dishes are not drying</i>	Improper loading	Load the dishwasher as shown in this user manual.
	Too little rinse-aid	Increase the amount of rinse-aid/refill the rinse-aid dispenser.
	Dishes are removed too soon	Do not empty your dishwasher immediately after washing. Open the door slightly so that the steam can escape. Begin unloading the dishwasher only once the dishes are barely warm to the touch. Empty the low basket first. This prevents water from dropping off dishes in the upper basket.
	Wrong program has been selected	In short programs the washing temperature is lower. This lowers cleaning performance. Choose a program with a long washing time.
	Use of cutlery with a low-quality coating	Water drainage is more difficult with these items. Cutlery or dishes of this type are not suitable for washing in the dishwasher.

## Error Codes

In the event of a malfunction, the control panel may show a particular combination of lights to indicate an error code. The following table describes these error codes.

<i>Codes</i>	<i>Meanings</i>	<i>Possible Causes</i>
<i>The Rapid light quick flashing</i>	Water supply too slow.	Faucets is not opened, or water intake is restricted, or water pressure is too low.
<i>The Heavy light quick flashing</i>	Overflow.	Some part of the dishwasher may be leaking.

### ⚠ WARNING!

- If overflow occurs, turn off the main water supply before calling a service.
- If there is water in the base pan because of an overflow or small leak, the water should be removed before restarting the dishwasher.