

FOR INFORMATION ONLY

DISHWASHER ERROR CODE E2 - OVERFILLING

E2 – Safety pressostat intervention


This alarm is generated when the float switch and the pressure switch report that there is too much water in the appliance. In this situation the cycle is not immediately stopped, but the tank is emptied and then another attempt at filling.

This situation can happen 3 times consecutively in a washing cycle and after 3 times the cycle stops and the appliance displays an E2 error code.

This defect can be caused by, but not only, high water pressure or a defective pressure switch which is sometimes referred to as a pressostat level and is located underneath the appliance.



An example of a float switch.

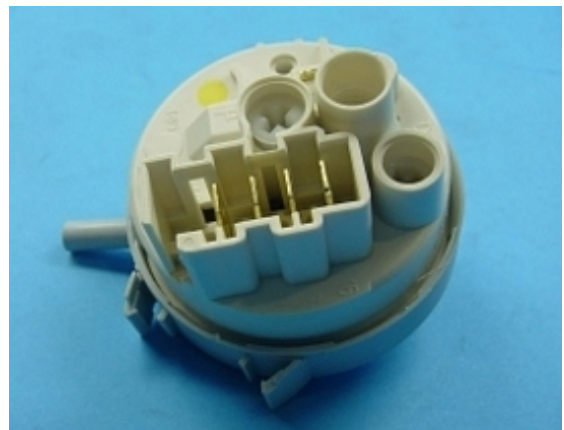

An example of a pressure switch.