

FOR INFORMATION ONLY

DISHWASHER ERROR CODE E3 - NO HEATING

E3 – No heating

This alarm is generated when the appliance is not heating or is not heating quick enough, ie: less than 1.5°C in 20min.

This defect can be caused by, but not only, a defective element or clogged spray arms.

The element is the component which heats the water to the required temperature, there are 2 types of element. There is the standard element type which sits in the bottom of the wash cavity and there is also the newer, more economical through flow heater which is located underneath the appliance.



An example of a through flow heater



An example of a standard element.