

**FOR INFORMATION ONLY**

**DISHWASHER ERROR CODE E4 - TEMPERATURE SENSOR DISCONNECTED**

**E4 – Temperature sensor disconnected**

This alarm is generated as soon as the appliance starts a cycle and is indicating that the temperature sensor is disconnected. It is uncommon that this fault appears “spontaneously” as it usually happens after an intervention concerning wiring, for example the replacement of the detergent dispenser.

The temperature sensor regulates and reports the water temperature within the appliance and is usually located within the door and is sometimes referred to as a thermister or door stat.



*An example of a temperature sensor.*