

**FOR INFORMATION ONLY**


**DISHWASHER ERROR CODE E5 - APPLIANCE IS NOT FILLING**

**E5 – Water fails to fill**

This alarm is generated during the filling phase of a cycle if the required water level is not reached within 7 minutes.

This defect can be caused by, but not only, the water supply tap turned to the off position, the drain pipe being blocked or obstructed or a defective solenoid valve.

The solenoid valve regulates the flow of water into the appliance which is located at the rear of the appliance and is sometimes referred to as the inlet valve. The water volume is measured by the pressure switch and the flow meter.

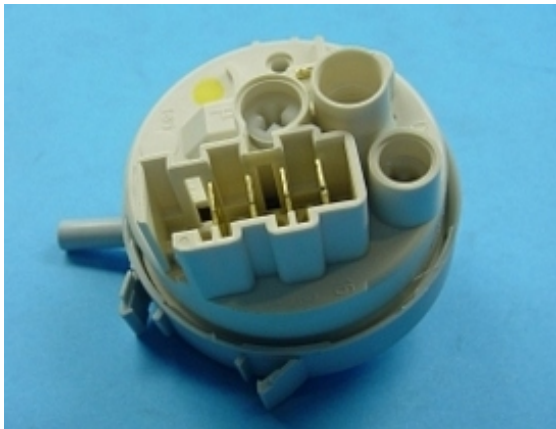

*An example of a pressure switch.*



*An example of a solenoid valve.*



*An example of a flow meter.*