

FOR INFORMATION ONLY


DISHWASHER ERROR CODE E6 - APPLIANCE IS NOT DRAINING

E6 – Defective drain

This alarm is generated during the drain phase of a wash cycle if “empty” is not reached within the allotted time of 3 minutes. Draining is attempted 3 times and each attempt lasts 1 min and after these 3 times the appliance points out an E6 error.

This defect can be caused by, but not only, a defective drain pump, a defective pressure switch or a blocked or obstructed drain hose.

The water volume is measured by the pressure switch and the timing is regulated by the timer pcb.

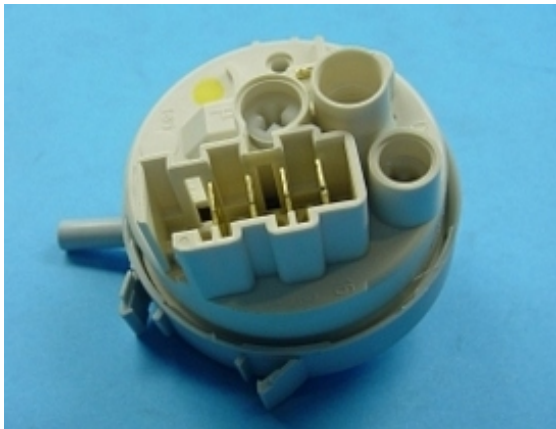

An example of a pressure switch.



An example of a drain pump.



An example of a drain hose.