

**FOR INFORMATION ONLY**

## **DISHWASHER ERROR CODE E7 - FLOW METER FAILURE**

### **E7 – Flow meter failure**

This alarm is generated when the pcb timer card does not detect any signal coming from the flow meter.

This defect can be caused by, but not only, a defective flow meter which is sometimes referred to as the turbine.



*An example of a flow meter.*



*An example of a timer pcb.*